

RICE Performance Emissions Test Report

Performed for: Upper Michigan Energy Resources
Corporation
At The: F.D. Kuester Generating Station
MI-ROP-P0797-2020
EURICE7 Outlet Duct
Negaunee, Michigan
June 30, 2021

Report Submittal Date August 11, 2021

© Copyright 2021 All rights reserved in Mostardi Platt

Project No. M212003G

TABLE OF CONTENTS

1.0 EXECUTIVE SUMMARY	1
2.0 TEST METHODOLOGY	2
Method 1 Traverse Point Determination Method 3A Oxygen (O₂)/Carbon Dioxide (CO₂) Determination	
Method 7E Nitrogen Oxide (NOx) Determination	3
Method 25A Volatile Organic Compound (VOC) Determination	4
Method 320 Fourier Transform Infrared (FTIR) Detector for Methane and Ethane Determination	
3.0 TEST RESULT SUMMARY	8
4.0 CERTIFICATION	9
APPENDIX Appendix A - Plant Operating Data	11
Appendix B - Test Section Diagrams	13
Appendix C - Sample Train Diagram	16
Appendix D - Calculation Nomenclature and Formulas	
Appendix E - Reference Method Test Data (Computerized Sheets) and Laboratory Data	
Appendix F - Calibration Data	37 43
Appendix H - Gas Cylinder Certifications	

1.0 EXECUTIVE SUMMARY

MOSTARDI PLATT conducted a RICE performance emissions test program for Upper Michigan Energy Resources Corporation (UMERC) on June 30, 2021 at F.D. Kuester Generating Station on the Reciprocating Internal Combustion Engine 7 (EURICE7) Outlet Duct in Negaunee, Michigan. The purpose of the test program was to meet the ongoing compliance demonstration requirements for emission rates in accordance with Renewable Operating Permit MI-ROP-P0797 and 40 CFR Part 60 Subpart JJJJ. This report summarizes the results of the test program and test methods used.

The test location, test date, and test parameters are summarized below.

Test Location	Test Date	Test Parameters
EURICE7 Outlet Duct	June 30, 2021	Nitrogen Oxides (NO _x), Carbon Monoxide (CO), Carbon Dioxide (CO ₂), Oxygen (O ₂), Volatile Organic Compounds (VOCs), and Moisture

F.D. Kuester Generating Station electric generation facility includes seven (7) Wärtsilä W18V50SG natural gas-fired, four stroke, lean burn, spark ignition reciprocating internal combustion engines (RICE) coupled to 19,260 kW electric generators, a 1,000 kW natural gas-fired emergency generator, and one natural gas-fired natural gas conditioning heater. The RICE electric generating unit engines utilize pipeline quality natural gas and are equipped with selective catalytic reduction (SCR) for nitrogen oxides (NOx) control and oxidation catalyst systems for carbon monoxide (CO), volatile organic compound (VOC), and organic hazardous air pollutant (HAP) control. Each RICE electric generating unit exhausts into a common stack.

Selected results of the test program are summarized below on a ppmvd @ 15% O₂ basis. A complete summary of emission test results follows the narrative portion of this report.

TEST RESULTS								
Test Location Test Date		Test Parameter	Emission Rate	Emission Limit				
		NOx	3.2 ppmvd @ 15% O₂	82 ppmvd @ 15% O ₂				
EURICE7	6/30/2021	СО	5.1 ppmvd @ 15% O ₂	270 ppmvd @ 15% O₂				
Outlet Duct		VOC (as C₃H ₈)	11.7 ppmvd @ 15% O₂	60 ppmvd @ 15% O₂				

Operating Data as provided by the plant is included in Appendix A.

The identifications of the individuals associated with the test program are summarized below.

TEST PERSONNEL INFORMATION							
Location	Address	Contact					
Test Coordinator	WEC Energy Group, Inc 231 W. Michigan Street Milwaukee, Wisconsin 53203	Mr. Justin Kowalski Senior Environmental Consultant 414-221-2265					
Test Facility	Upper Michigan Energy Resources Corporation F.D. Kuester Generating Station 80 Eagle Mills Road Negaunee, MI 49866	justin.kowalski@wecenergygroup.com					
Testing Company Representative	Mostardi Platt 888 Industrial Drive Elmhurst, Illinois 60126	Mr. Sean Dyra Project Manager (630) 993-2100 (phone) sdyra@mp-mail.com					

The test crew consisted of Messrs. J. Carlson, M. Sather and S. Dyra of Mostardi Platt.

2.0 TEST METHODOLOGY

Emission testing was conducted following the methods specified in Code of Federal Regulations, Title 40, Part 60, Appendix A (40CFR60), 40CFR51, and 40CFR63. Schematics of the test section diagrams and sampling trains used are included in Appendix B and C, respectively. Calculation examples and nomenclature are included in Appendix D. Copies of analyzer print-outs for each test run are included in Appendix E.

The following methodologies were used during the test program:

Method 1 Traverse Point Determination

Test measurement points were selected in accordance with Method 1. The characteristics of the measurement location are summarized below.

	TEST POINT INFORMATION									
Location	Diameter (Feet)	Area (Square Feet)	Upstream Distance (Inches)	Downstream Distance (Inches)	Test Parameter	Number of Sampling Points				
EURICE7 Outlet Duct	5.29	21.98	>0.5	>2.0	NO _x , CO, VOC, O ₂ , CO ₂	12 (strat), 1				

Method 3A Oxygen (O₂)/Carbon Dioxide (CO₂) Determination

Flue gas O₂ was determined in accordance with Method 3A. A Servomex analyzer was used to determine stack gas oxygen content connected to the outlet of the FTIR analyzer.

Flue gas carbon dioxide concentrations and emission rates were determined in accordance with Method 3A. An MKS MultiGas 2030 FTIR spectrometer was used to determine the CO_2 concentrations, in the manner specified in the Method. Nitrogen content was determined from the difference of CO_2 and O_2 .

Stack gas was delivered to the analyzer via a Teflon® sampling line, heated to a minimum temperature of 375°F. The entire system was calibrated in accordance with the Method, using certified calibration gases introduced at the probe, before and after each test run.

All of the equipment used was calibrated in accordance with the specifications of the Method and calibration data are included in Appendix F. Copies of the gas cylinder certifications are included in Appendix H.

Method 7E Nitrogen Oxide (NO_X) Determination

Flue gas nitrogen oxide concentrations and emission rates were determined in accordance with Method 7E. An MKS MultiGas 2030 FTIR spectrometer was used to determine nitrogen oxide concentrations, in the manner specified in the Method.

Stack gas was delivered to the analyzer via a Teflon® sampling line, heated to a minimum temperature of 375°F. The entire system was calibrated in accordance with the Method, using certified calibration gases introduced at the probe, before and after each test run.

A list of calibration gases used and the results of all calibration and other required quality assurance checks can be found in Appendix F. Copies of calibration gas certifications can be found in Appendix H.

Method 10 Carbon Monoxide (CO) Determination

Flue gas nitrogen oxide concentrations and emission rates were determined in accordance with Method 10. An MKS MultiGas 2030 FTIR spectrometer was used to determine carbon monoxide concentrations, in the manner specified in the Method.

Stack gas was delivered to the analyzer via a Teflon® sampling line, heated to a minimum temperature of 375°F. The entire system was calibrated in accordance with the Method, using certified calibration gases introduced at the probe, before and after each test run.

A list of calibration gases used and the results of all calibration and other required quality assurance checks can be found in Appendix F. Copies of calibration gas certifications can be found in Appendix H.

				· .
		`		
			·	
			·	

Method 25A Volatile Organic Compound (VOC) Determination

Total hydrocarbon (THC) concentrations and emission rates were determined in accordance with Method 25A. A Thermo 51i analyzer was used to determine THC concentrations. Stack gas was delivered to the system via a Teflon® sampling line, heated to a minimum temperature of 375°F.

Methane and ethane concentrations were determined in accordance with Method 320 and then subtracted from the THC concentrations in order to comply with non-methane, non-ethane hydrocarbon criteria as specified in the permit. The methane concentration was also corrected for a response factor for the Thermo 51i analyzer. These results can be found in Appendix G along with the calibration data.

The system was calibrated before and after each test run using certified calibration gases of propane for the THC determination. Copies of gas certifications are presented in Appendix H.

Method 320 Fourier Transform Infrared (FTIR) Detector for Methane and Ethane Determination

The Method 320 sampling and measurement system meets the requirements of US EPA Reference Method 320, "Vapor Phase Organic and Inorganic Emissions by Extractive FTIR," 40CFR63, Appendix A. This method applies to the measurement of combustion gas concentrations. With this method, gas samples are extracted from the sample locations through heated Teflon sample lines to the analyzer.

FTIR technology works on the principle that most gases absorb infrared light. This is true for all compounds with the exception of homonuclear diatomic molecules and noble gases such as: N2, O2, H2, He, Ne, and Ar. Vibrations, stretches, bends, and rotations within the bonds of a molecule determine the infrared absorption distinctiveness. The absorption creates a "fingerprint" which is unique to each given compound.

The quantity of infrared light absorbed is proportional to the gas concentration. Most compounds have absorbencies at different infrared frequencies, allowing the simultaneous analysis of multiple compounds at one time. The FTIR software compares each sample spectrum to a user-selected list of calibration references and performs a classical least squares analysis to determine concentration data on a wet volume basis and the spectral residuals for each analyte (the error associated with each measurement). FTIR data was collected using an MKS MultiGas 2030 FTIR spectrometer. The FTIR was equipped with a temperature-controlled, 5.11 meter multi-pass gas cell maintained at 191°C. Gas flows and sampling system pressures were monitored using a rotameter and pressure transducer.

All data was collected at 0.5 cm⁻¹ resolution. Each spectrum was derived from the coaddition of 62 scans, with a new data point generated approximately every one minute. Analyzer data for each run is present is Appendix E.

SAMPLING SYSTEM PARAMETERS								
MKS Serial #	Sampling Line	Probe Assembly	Particulate Filter Media	Operating Temperatures				
110161896	100' 3/8" dia., heated Teflon	Heated 8', 3/8" dia. SS	0.01µ heated borosilicate glass fiber	191°C				

,					
	·				

QA/QC procedures followed US EPA Method 320. See below for QA/QC procedure details and list of calibration gas standards. All calibration gases were introduced to the analyzer and the sampling system using an instrument grade stainless steel rotameter. All QA/QC procedures were within the acceptance criteria allowance of the applicable EPA methodology. See Appendix G for FTIR QA/QC Data and instrument linearity validations.

	FTIR QA/QC PROCEDURES								
QA/QC Specification	Purpose	Calibration Gas Analyte	Delivery	Frequency	Acceptance Criteria	Result			
M320: Zero	Verify that the FTIR is free of contaminants & zero the FTIR	Nitrogen (zero)	Direct to FTIR	pre/post test	< MDL or Noise	Pass			
M320: Calibration Transfer Standard (CTS) Direct	Verify FTIR linearity, confirm optical path length	Ethylene	Direct to FTIR	pretest	+/- 5% cert. value	Pass			
M320: Analyte Direct	Verify FTIR calibration	Acetaldehyde, Methanol, SF6	Direct to FTIR	pretest	+/- 5% cert. value	Pass			
M320: CTS Response	Verify system linearity, recovery, response time	Ethylene	Sampling System	Daily, pre/post test	+/- 5% of Direct Measurement	Pass			
M320: Zero Response	Verify sampling system has no bias for analytes of interest	Nitrous Oxide with nitrogen balance	Sampling System	pretest	Bias correct data	Pass			
M320: Analyte Spike	Verify system ability to deliver and quantify analyte of interest in the presence of effluent gases	Acetaldehyde, Methanol, SF6	Dynamic Addition to Sampling System, 1:10 effluent	Throughout testing – daily	+/- 30% theoretical recovery	Pass			

Note: The determined concentrations from direct analyses were used in all system/spike recovery calculations.

CALIBRATION GAS STANDARDS								
Components	Concentration (ppm)	Vendor	Cylinder#	Standard Type				
Ethylene	99.41	Airgas	CC234526	Certified Standard-Spec +/- 2%				
Acetaldehyde/ Methanol/SF6	198 / 205.9 / 5.122	Airgas	SG9159486 BAL	Certified Standard +/- 2% (Acetaldehyde/Methanol) Certified Standard +/- 5% (SF ₆)				
Nitrogen	Zero Gas	Airgas	N/A	UHP Grade				

Analyte Spiking

Acetaldehyde and methanol spiking was performed prior to testing to verify the ability of the sampling system to quantitatively deliver a sample containing acetaldehyde and methanol from the base of the probe to the FTIR. Analyte spiking assures the ability of the FTIR sampling system to recover volatile organics in the presence of effluent gas.

As part of the spiking procedure, samples were measured to determine native acetaldehyde and methanol concentrations to be used in the spike recovery calculations. The analyte spiking gases contained a low concentration of sulfur hexafluoride (SF $_6$). The determined SF $_6$ concentration in the spiked sample was used to calculate the dilution factor of the spike and thus used to calculate the concentration of the spiked acetaldehyde and methanol. The spike target dilution ratio was 1:10 or less.

The following equation illustrates the percent recovery calculation.

$$DF = \frac{SF6(spk)}{SF6(direct)}$$
 (Sec. 9.2.3 (3) USEPA Method 320)

$$CS = DF * Spike(dir) + Unspike(1 - DF)$$
 (Sec. 9.2.3 (4) USEPA Method 320)

DF = Dilution factor of the spike gas

SF_{6(dir)} = SF₆ concentration measured directly in undiluted spike gas

 $SF_{6(spk)}$ = Diluted SF_6 concentration measured in a spiked sample

Spike_{dir}= Concentration of the analyte in the spike standard measure by the FTIR directly

CS = Expected concentration of the spiked samples

Unspike = Native concentration of analytes in unspiked samples

Post Collection Data Validation

As part of the data validation procedure, reference spectra are manually fit to that of the sample spectra and a concentration is determined. The reference spectra are scaled to match the peak amplitude of the sample, providing a scaling factor. The scaling factor multiplied by the reference spectra concentration is used to determine the concentration value for the sample spectra. Sample pressure and temperature corrections are then applied to compute the final sample concentration. The manually calculated results are then compared with the software-generated results. The data is then validated if the two concentrations are within ± 20% agreement. In some cases, the percent difference between the two analyses is relatively large, but the absolute concentration difference is minimal. If this is not determined to be the case, then the spectra are reviewed for possible spectral interferences or any other possible causes leading to incorrectly quantified data. See Appendix G FTIR QAQC for manual subtractions.

Detection Limit

The detection limit of each analyte was calculated following Annex A2 of ASTM D6348-12 procedure using spectra that contained similar amounts of moisture and carbon dioxide.

Analyte	Detection Limit (ppmv wet)	Detection Limit (%v)
Methane	1.0	•
Ethane	0.5	•
Moisture	-	0.1

	'n		
•			

The spectral residuals for each compound are calculated using the classical least squares analysis. When the residual error exceeds the measured concentration, the compound is considered a non-detect, allowing the residual to verify the detection limit. The spectral residual also permits the analyst to determine if there are possible interferences in the sample matrix.

QA/QC data are found in Appendix G. Copies of gas cylinder certifications are found in Appendix H. All concentration data were recorded on a wet, volume basis. The sample and data collection followed the procedures outlined in Method 320.

•					
				·	
				•	
	•				

3.0 TEST RESULT SUMMARY

							higan Energy D Kuester Ger EURICE7 O	nerating Sta						
	Gaseous Summary													
								THC ppm		CH₄ ppm		C₂H ₆ ppm	VOC ppm	VOC ppm
Test		Start	End		co			as C₃H ₈	CH₄ ppm as	as C₃H ₈	C₂H₅ ppm as	as C ₃ H ₈	as C₃H₃	as C₃H ₈
No.	Date	Time	Time	NO _x ppmvd	ppmvd	O₂ % (dry)	Moisture, %	(wet)	CH ₄ (wet)	(wet)	C ₂ H ₆ (wet)	(wet)*	(wet)	(dry)
1	06/30/21	08:00	09:07	5.9	7.6	11.5	10.8	166.4	303.8	133.7	31.6	21,1	11.7	13.1
2	06/30/21	09:37	10:36	4.8	8.3	11.6	10.9	177.2	310.0	136.4	32.2	21.5	19.3	21.7
3	06/30/21	11:05	12:04	4.6	8.3	11.5	10.8	174.7	306.0	134.6	32.0	21.3	18.7	21.0
	Avei	rage		5,1	8.1	11.5	10.8	172.8	306.6	134.9	31.9	21.3	16.6	18.6

Emission Rate Summary

Test No.	Date	Start Time	End Time	NO _x ppmvd @ 15% O ₂	CO ppmvd @ 15% O₂	VOC ppmvd @ 15% O₂ as C₃H₃
1	06/30/21	08:00	09:07	3.7	4.8	8.2
2	06/30/21	09:37	10:36	3.0	5.3	13.8
3	06/30/21	11:05	12:04	2.9	5,2	13.2
	Aver	age		3.2	5.1	11.7

*Methane is corrected with a Response Factor of 1.32 for the Thermo 51i analyzer

RECEIVED

AUG 27 2021

AIR QUALITY DIVISION

	·		

4.0 CERTIFICATION

MOSTARDI PLATT is pleased to have been of service to Upper Michigan Energy Resources Corporation. If you have any questions regarding this test report, please do not hesitate to contact us at 630-993-2100.

CERTIFICATION

As project manager, I hereby certify that this test report represents a true and accurate summary of emissions test results and the methodologies employed to obtain those results, and the test program was performed in accordance with the methods specified in this test report.

MOSTARDI PLATT

Sean P. Dyra

Program Manager

Scottw. Barace

Quality Assurance

Scott W. Banach

4		

APPENDICES


Appendix A – Plant Operating Data

F.D. Kuester Generating Station 40 CFR Part 60 Subpart JJJJ Performance Emissions Testing Summary of Operating Data June 30, 2021

		ONE WORK THE COLUMN TO THE COL		·
EURICE7				
6/30/2021				
Method 3A and 320				
Start Time	800	937	1105	
End Time	907	1036	1204	
	Run 1	Run 2	Run 3	Average
Engine (kW)	18,060	18,070	18,072	18,067
Engine natural gas use (pound/hour)	6,539	6,549	6,542	6,543
SCR/Oxidation catalyst inlet temperature) (deg F)	717	714	712	714
Pressure drop across the oxidation catalyst (PSI)	0.18	0.20	0.19	0.19
Urea injection rate to the SCR (gallons/hour)	4.6	4.4	4.6	4.5

Appendix B - Test Section Diagrams

STRATIFICATION TRAVERSE FOR ROUND DUCTS

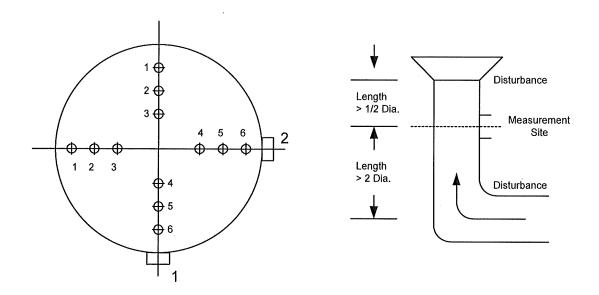

Job: Upper Michigan Energy Resources Corporation

F.D. Kuester Generating Station

Date: June 30, 2021

Test Location: EURICE7 Outlet Duct

Duct Diameter: 5.29 Feet


Duct Area: 21.98 Square Feet

No. Points Across Diameter: 6

No. of Ports: 2

Port Length: 8.0 Inches

GASEOUS TRAVERSE FOR ROUND DUCTS

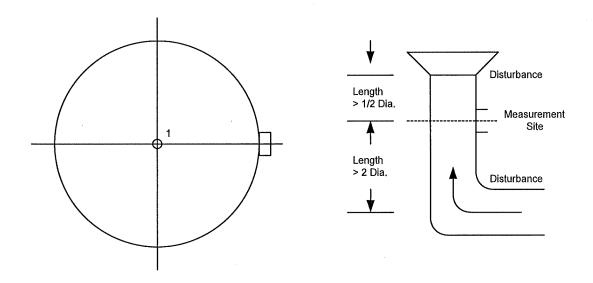

Job: Upper Michigan Energy Resources Corporation F.D. Kuester Generating Station

Date: June 30, 2021

Test Location: EURICE 7 Outlet Duct

Duct Diameter: 5.29 Feet

Duct Area: 21.98 Square Feet


No. Points Across Diameter: 1

No. of Ports: 1

Port Length: 8.0 Inches

Appendix C - Sample Train Diagram

USEPA Methods 3A, 7E, 10, 25A, and 320 – Sample Train Diagram

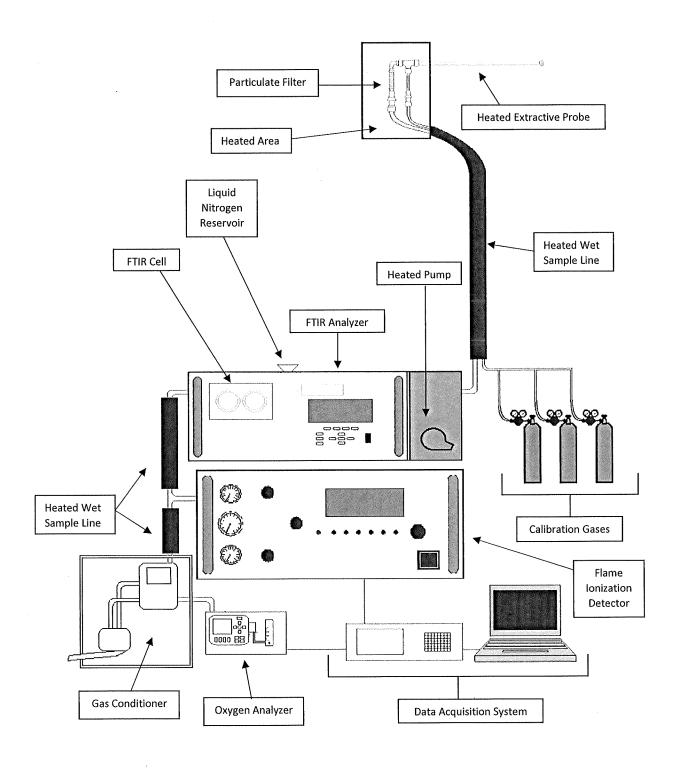

ATD-081C USEPA Method 3A/7E/10/25A/320

Rev. 0.0

4/9/2020